

B5T-007001

Explanation of USB installed driver
(Windows 10 Version)

-
1. Outline
 2. Prepared items
 3. Installation procedure
 1. Connect to PC
 2. Confirmation of COM Port
 4. Responding to installation failures

- We explain about the procedure of B5T-007001's USB driver installation procedure.
- This application checks the behavior in the following environment.

OS Windows 10 Pro 64bit / 32bit

CPU Intel® Core™ i7-3770MQ CPU @ 3.40GHz

Windows, Windows10 is registered trademark for Microsoft US corporation and included other countries.

Intel, Intel Core is trademark of Intel Corporation in US and other countries. Other product names are trademarks or registered trademarks of their respective owners.

2. Prepared items

- B5T-007001(HVC-P2)
- PC(OS: Windows 10)
 - ※To do the installed operation is needed administrator privileges.
We recommend to operate login for PC by manager's account.
- USB2.0 microUSB cable
 - ※It doesn't work with charge dedicated cable.

3. Installation procedure (Connect to ①)


- Please connect B5T-007001 to PC.
- Start up installing the driver's software automatically.

※It's indicated an icon below in the red circle while installing.




3. Installation procedure (Connect to ②) **OMRON**

- Please wait until ending due to indicate dialog.
- It's completed the installation if dialog's removed.

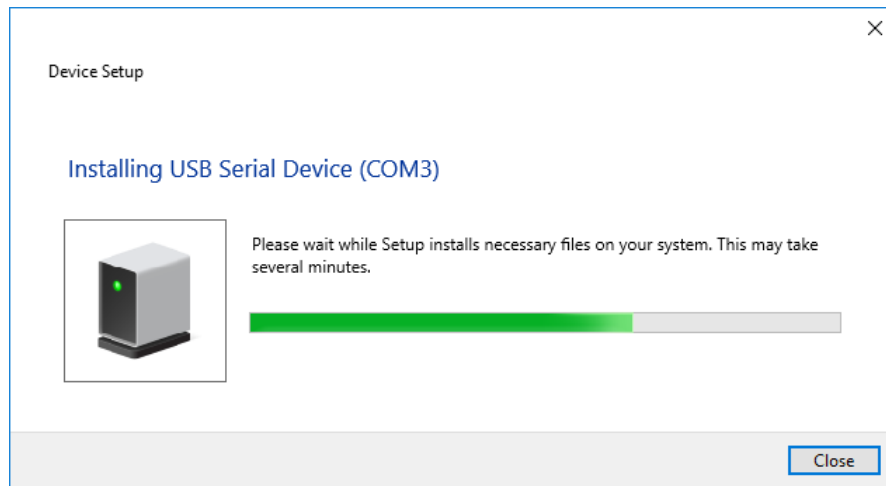


3. Installation procedure (Confirmation of COM Port①)

- Please confirm “USB Serial Device” added to the blank “Port” from the device manager.

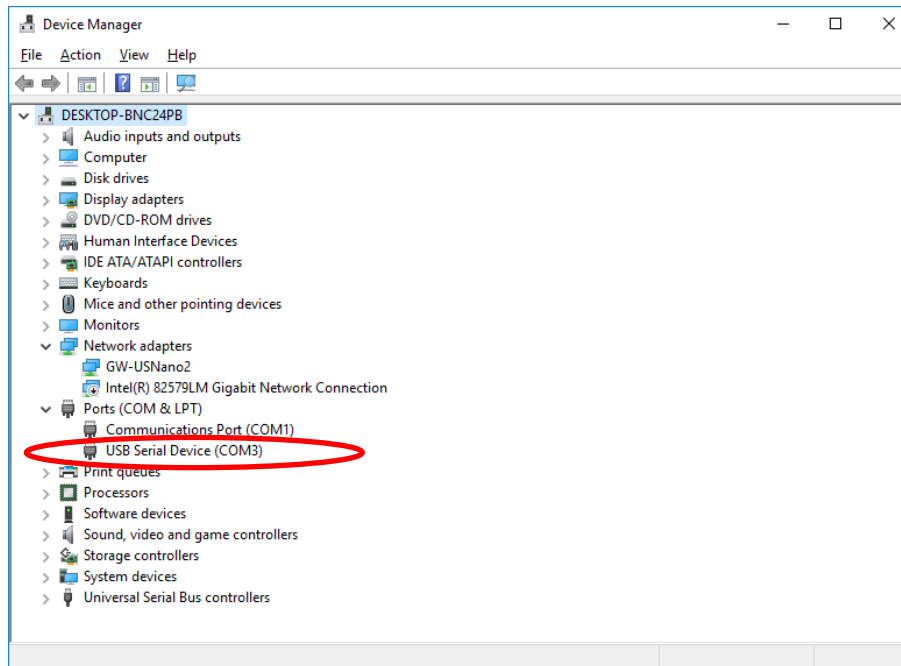



3. Installation procedure (Confirmation of COM Port②)

- Please confirm COM port property from the device manager.
- It's succeeded if there's indication of "This device working properly"

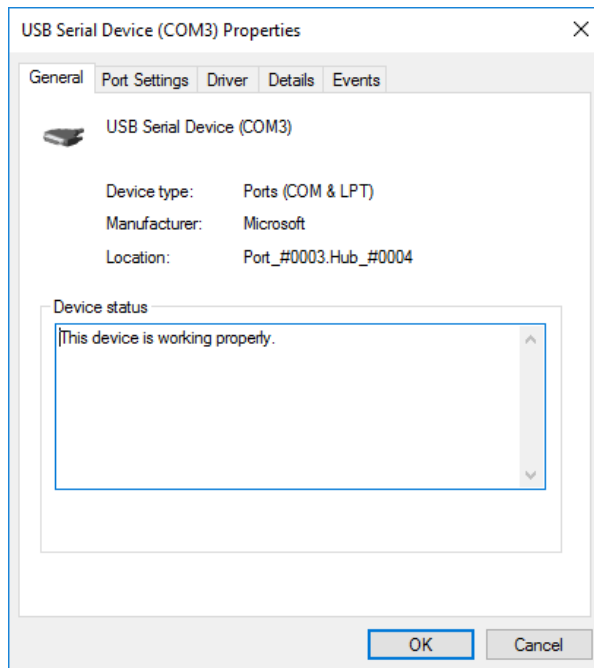



4. Responding to installation failures

- Please download the USB driver from URL below.
URL:<https://plus-sensing.omron.com/product/B5T-007001/>
- Please confirm that " USB Serial Device " exists in the "Other devices" field from Device Manager(See left picture).
- Please choose the Update Driver Software by right click(See right picture).

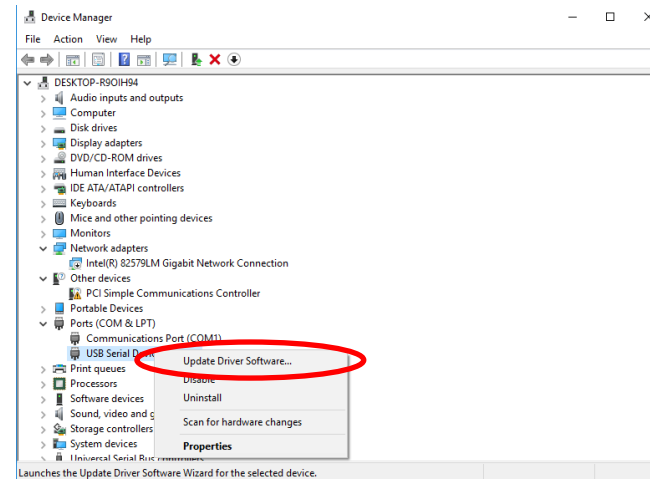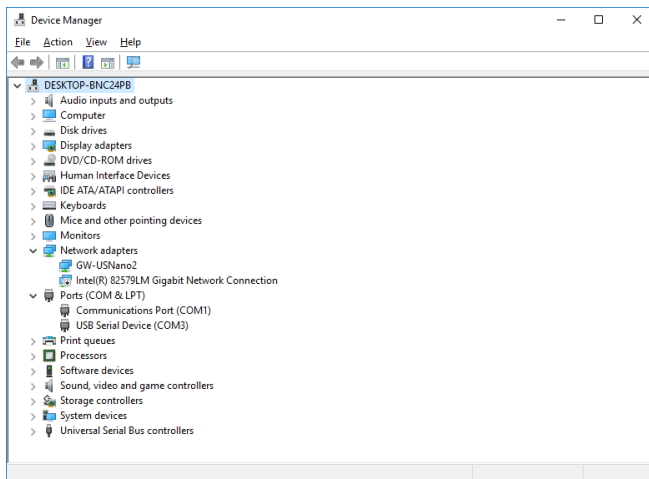


4. Responding to installation failures

- Please choose “Browse my computer for driver software”(See left picture).
- Please choose the folder(OMRON_inf) which saved the downloaded driver(See right picture).

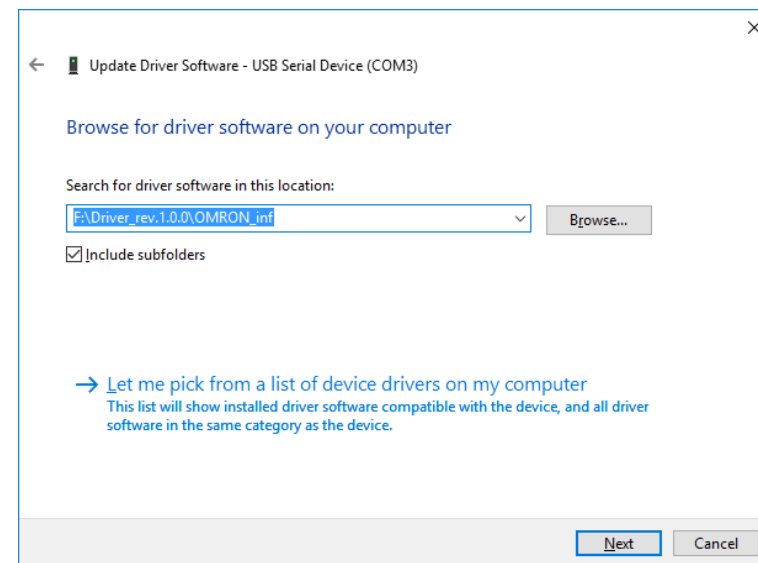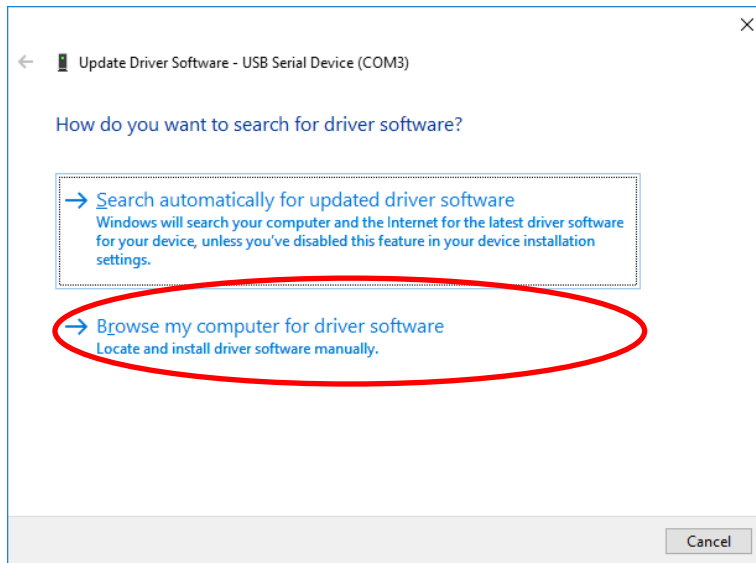

4. Responding to installation failures

- End of installing if it's indicated "Windows has successfully updated your driver software".

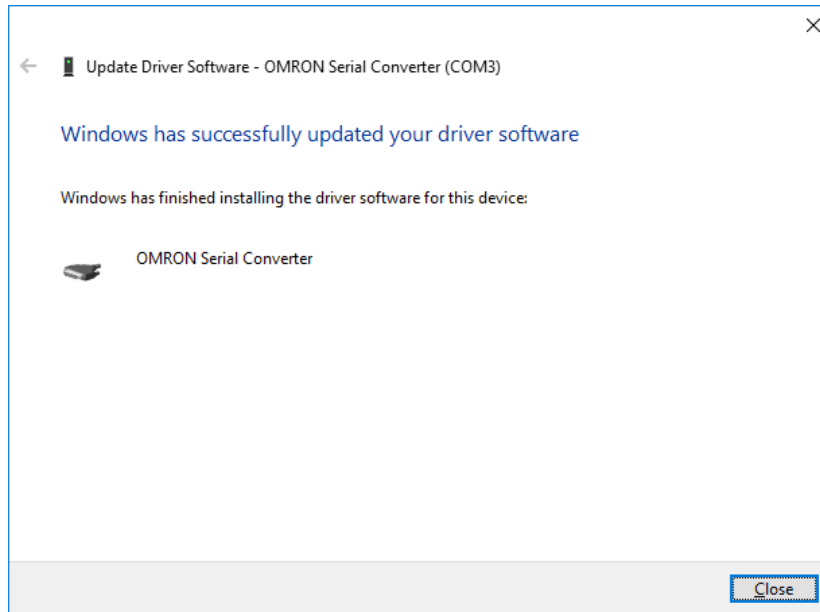

Revision history

Date	Rev	Contents	Made by	Inspect ed by	Approv ed by
2016/11/29	A	First release	Kojima	Manabe	Yamada